

Section 6
SPECIFICATIONS

CAPACITY	10 oz./300 ml cartridge
BATTERY	Li-ion 7.2V, 1.5Ah, 10.8W
SIZE	15.35" L x 2.78" W x 8.86" H
MAXIMUM FORCE	1000 lbs.
DISPENSE RATE	100 tubes per 1 fully charged battery
PUSH ROD SPEED	13"/minute
CASE DIMENSIONS	15.75" L x 12.2" W x 3.15" H
ADDITIONAL BATTERY PACK	#2351 Battery Pack



POWER CAULK & ADHESIVE GUN

OPERATING INSTRUCTIONS



Aervoe Industries, Inc.
Gardnerville, NV 89410 • (800) 227-0196
www.aervoe.com • mailbox@aervoe.com

#2350 POWER CAULK & ADHESIVE GUN

Replaces standard manual caulking guns for dispensing sealants and adhesives from 10 oz./300 ml. caulking tubes. Not recommended for use with polyurethane adhesives.

Section 1


Important Warnings & Safeguards

Read all instructions thoroughly before operating this unit to avoid injury to self or property and avoid damage to the unit. Keep instructions handy for reference during use.

- Keep hands away from the tool plunger and the plunger rod while operating
- Remove battery from tool when charging
- Only charge using the included 120V AC wall charger. Using other chargers could be hazardous or cause damage to the tool.
- Do not use alcohol, flammable solutions, or other solvents on or near this unit. Only clean the plastic components with warm water and a cloth. For metal components (cartridge holder, plunger, and plunger rod) use a non-flammable cleaner/degreaser. Aervoe #5075 Biodegradable Cleaner/Degreaser or #5025 Hand-y Pro Towel would work.
- Administer close supervision when using around children
- Do not disassemble the tool. Doing so may cause damage, failure to operate properly, and voids the warranty.
- Always keep the battery contacts clean and dry

Section 2

PARTS IDENTIFICATION

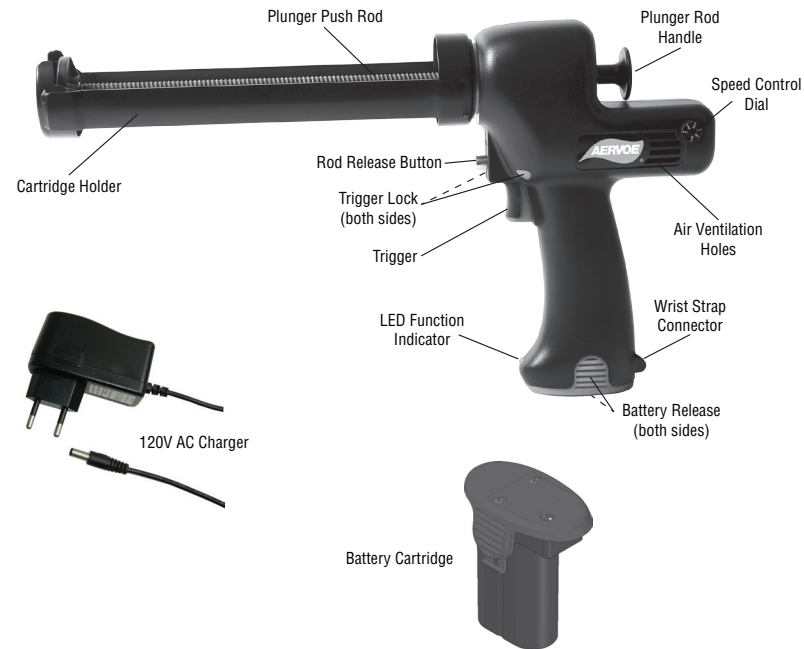

Section 3

CHARGING THE BATTERY

To reduce the risk of personal injury, always unplug the charger and remove the battery from the charger or tool before performing any maintenance. Never disassemble the tool, battery or charger.

1. Remove the rechargeable battery from the tool. It cannot be recharged when installed.
2. Plug the AC adapter into and 120V AC electrical outlet.
3. Insert the pin connector on the adapter into the input on the rechargeable battery. The charging indicator on the charger will illuminate.
 - Red LED = charge in process
 - Green LED = fully charged
4. Monitor during charging and disconnect when charging has finished.

Section 4

OPERATION

1. Push the TRIGGER LOCK to the OFF position. Always have it in the OFF position when installing and removing the battery, cleaning or when not in use.
2. The tool will not operate when the trigger is in the locked position.
3. Insert a fully charged battery by sliding it into the handle until you hear it “click” into place.
4. Pull out the PLUNGER ROD HANDLE by pressing the ROD RELEASE BUTTON and pulling the handle all the way back.
5. Insert the tube into the metal CARTRIDGE HOLDER making sure the proper cartridge has been selected.
6. Trim the nozzle. A smaller hole requires more power to push the tube plunger, which may also affect the battery run time and battery life.
7. Press the ROD RELEASE BUTTON and push the PLUNGER ROD HANDLE forward until the plunger touches the tube.
8. Push the TRIGGER LOCK to the ON position.
9. Pull the TRIGGER to dispense the material. You can adjust the delivery speed by turning the SPEED CONTROL DIAL.

LED Function Light Indicators

LED COLOR	ACTION OR ERROR	STATUS
Solid white	Plunger rod moves forward	Normal function
Flashing white	Plunger rod moves backward	Normal function
Flashing green	Over voltage protection	Automatically powers off
Solid red	Low battery voltage	Charge the battery pack
Flashing red	Low battery voltage protection	Automatically powers off
Solid blue	Over temperature protection	Automatically powers off
Flashing blue	Over current protection	Automatically powers off

Section 5

MAINTENANCE AND DISPOSAL

Tool Maintenance

If the tool does not start or operate properly with a fully charged battery, clean the electrodes on the battery with a clean, dry cloth. Keep the PUSH ROD clean and free of calking material using a non-flammable cleaner.

Battery Maintenance

When properly maintained you can expect the battery to last 300 charge/discharge cycles. Follow all instructions included here.

A battery stored for 6 months without being used will eventually discharge by itself. Charge the battery every 6 months, even if it is unused, for optimum longevity.

Store the battery in a cool, dry place. Do not store where the temperature may exceed 122°F (50°C). High temperature will overheat the battery and reduce battery life.

Cleaning

- Clean dust and debris from the tool vents.
- Keep the handle clean, dry and free of oil or grease.
- Use only soap and a damp cloth to clean the tool, battery. Certain cleaning agents and solvents (including household cleaners) are harmful to plastic and other insulated parts.
- Never use flammable or combustible solvents on the tool.
- Clean the metal carriage and plunger rod components with a non-flammable cleaner/degreaser.

Disposal of Tool and Battery



WARNING! To reduce the risk of explosion, never burn a battery pack, even if it is damaged, dead or completely discharged.

- ✓ Do not dispose of electrical appliances as unsorted municipal waste; use separate collection facilities.
- ✓ Contact your local government agency for information regarding the collection systems available.
- ✓ If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and wellbeing.