

TROUBLESHOOTING

| POSSIBLE CAUSES | SYMPTOMS | | | | | | | | POSSIBLE REMEDIES | |
|---|---|-------------------------------|--------------------------|--------------|----------|---------------------|-----------|--------------------------------|-------------------|---|
| | FLAME DOES NOT GO OUT IN "OFF" POSITION | FLAME EXTINGUISHED DURING USE | STRONG GAS ODOR DETECTED | UNEVEN FLAME | NO FLAME | YELLOW/ORANGE FLAME | LOW FLAME | SPARK DOES NOT RESULT IN FLAME | | NO SPARK FROM PIEZOELECTRIC IGNITER |
| Clogged valve inlet port | | ▪ | ▪ | ▪ | | | | | ▪ | Requires manufacturer examination and maintenance |
| Ignition knob not working | ▪ | ▪ | | ▪ | | | | | | Requires manufacturer service or maintenance |
| Ignition system not working | | | | ▪ | | | | | ▪ | Requires manufacturer service or maintenance |
| Automatic fuel shut-off valve activated | | | | | ▪ | | | | | Return to Step 5 under Installing the Fuel Cartridge |
| O-ring worn or torn | | ▪ | ▪ | | | ▪ | | | | Requires manufacturer service or maintenance |
| Air temperature below 32°F (0°C) | | | | | | ▪ | | | ▪ | Move burner and cartridge to a warmer location |
| Low fuel supply | | | | | | | | | ▪ | Replace fuel cartridge |
| Empty fuel cartridge | | ▪ | | | | | | | ▪ | Replace fuel cartridge |
| Burner ports clogged | | | | ▪ | ▪ | ▪ | | | ▪ | Clean with an old toothbrush or wire brush |
| Fuel cartridge improperly installed or the cartridge valve may be defective | | | ▪ | | ▪ | | | | ▪ | Remove or replace fuel cartridge and re-insert correctly |
| Piezoelectric igniter bent or dirty | | | | | | | | | ▪ | Use a dry cloth or toothbrush to clean off piezoelectric igniter |
| Fuel cartridge locking lever in OFF position | | ▪ | | | ▪ | | | | ▪ | Move fuel cartridge locking lever to ON position. Make sure fuel cartridge has not been exposed to excess heat. |

SPECIFICATIONS

| | |
|---|--|
| DIMENSIONS | 12.8" x 10.8" x 3.6" |
| WEIGHT | 3.5 lbs. |
| FUEL | Use with #1214 Max-Butane Fuel only. Use of other fuel may result in unsafe operation of this appliance and danger to the operator, and voids our warranty. The LP-gas cylinder(s) used with stoves must be constructed and marked in accordance with the specifications for LP-gas cylinders or the U.S. Department of Transportation or Transport Canada, CAN/CSA 339. |
| BUTANE FUEL CONSUMPTION | 160 g/hr |
| BTU/HR | 7650 |
| SAFETY FEATURES | <ol style="list-style-type: none"> Butane fuel cartridge cannot be engaged if the ignition knob is not in the off position. Anti-explosion safety device will automatically disengage the butane cartridge if increased gas pressure is detected. |
| <small>GAS-FIRED</small>  <small>LISTED</small> | This product is listed to applicable UL Standards. ANSI Z21.72b-2002/CSA 11.2b-2002 |



TABLE TOP BURNER

OPERATING INSTRUCTIONS

| | |
|--|---|
|  <p>DANGER</p>  | <p>CARBON MONOXIDE HAZARD</p> <p>This appliance can produce carbon monoxide which has no odor.</p> <p>Using it in an enclosed space can kill you.</p> <p>Never use this appliance in an enclosed space such as a camper, tent, car, or home.</p> |
|--|---|



Price Zone

City of Commerce, CA 90040

MAX-TABLE TOP BURNER #8253

WARNING

FOR YOUR SAFETY

If you smell gas:


1. Do not attempt to light this appliance
2. Extinguish any open flame
3. Disconnect from fuel supply
4. Evacuate the area
5. Call for professional help

FOR YOUR SAFETY

Do not store or use gasoline or other liquids with flammable vapors in the vicinity of this or any other appliance.

- Caution: Trivet must be installed in the upright position before use.
- Read all instructions thoroughly before use and retain for future reference.
- Not for household use. For outdoor use only.
- All burning appliances consume oxygen. Use only in well ventilated areas.
- DO NOT tamper with or disconnect the factory installed safety devices.
- Operate burner only on stable, flat surfaces in a horizontal position.
- Avoid using when strong winds are present.
- DO NOT use oversized pots or pans that extend over the edge of the fuel cartridge cover.
- Never use two or more adjacent units to extend the cooking surface.
- DO NOT expose fuel cartridge to heat or open flame, or store at temperatures above 110°F (43°C)
- DO NOT use aluminum foil as a cooking container.
- DO NOT store burner with fuel cartridge installed.
- DO NOT use or store near heat, open flame, or gasoline.
- DO NOT use if burner has been damaged.
- No more than 48 LP-gas fuel cartridges shall be stored in one building.
- DO NOT leave stove unattended while in operation.
- Close supervision is necessary when used near children.


PARTS IDENTIFICATION

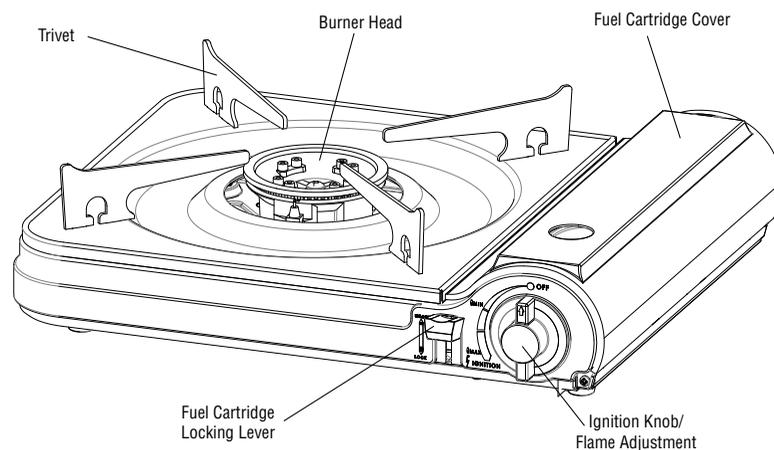

OPERATING INSTRUCTIONS



Regularly check the following items before operating and during use.

1. Keep the area around the stove clear and free from combustibles including gasoline and other flammable vapors and liquids. See diagram below.
2. Never obstruct the flow of combustion air and ventilation.
3. Inspect the fuel valve and other mechanical parts to ensure they are in good working order.

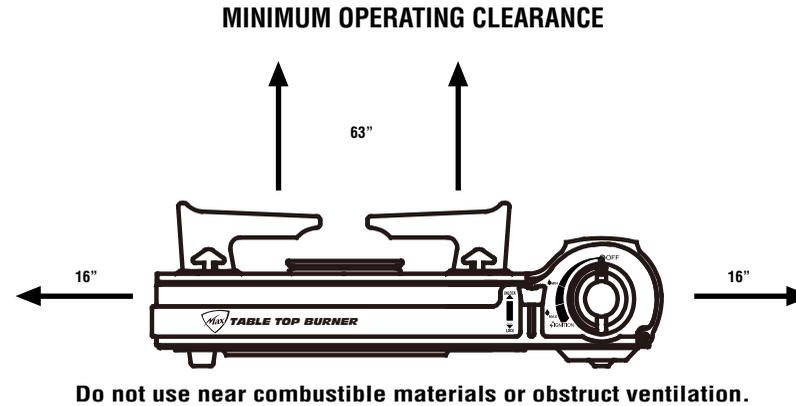

Installing the Fuel Cartridge

1. The ignition knob must be in the OFF position.
2. Open the fuel cartridge cover.
3. Remove the cap from the fuel cartridge.
4. Locate the notch collar on top of the fuel cartridge (see Fig. 1). Align the notch collar with the fuel cartridge index arm (see Fig. 2).
5. To engage the fuel cartridge, press down on the fuel cartridge locking lever until it is in the lock position. If the ignition knob is in the off position and a hissing sound is heard, this indicates a gas leak. Lift the fuel cartridge locking lever up to the unlock position to disengage the fuel cartridge. Remove the fuel cartridge and repeat steps 5 and 6 until no hissing sound is heard.

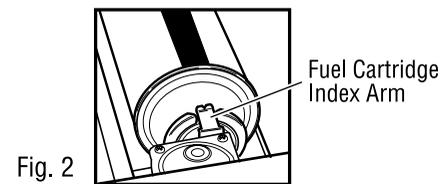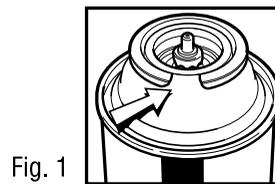

Igniting the Burner

CAUTION: Never operate or expose the stove to any other flammable vapors or liquids.

1. Close the fuel cartridge cover.
2. Turn the ignition knob in a counter-clockwise direction until you hear a loud click. A distinct click sound indicates that a spark has been generated, the burner should now be ignited, and a flame will be present.
3. Verify that a bluish-yellow flame is present and has completely formed around the burner orifice.
4. If the burner fails to ignite, immediately turn the ignition knob in a clockwise direction to the OFF position. Wait 5 minutes for gas vapors to dissipate, then repeat step 2 above.
5. Discontinue use and consult the manufacturer if stove fails to ignite properly after a few attempts.

To Adjust Heat

Full power is achieved when the ignition knob is in the HIGH position while the burner is on. To adjust the flame, turn the ignition knob slowly towards the OFF position until the desired flame or heat level is achieved.

To Shut Off

After every use:

1. Turn the ignition knob to the OFF position.
2. Lift the fuel cartridge locking lever up to the unlock position to disengage the fuel cartridge
3. Open the fuel cartridge cover and remove the fuel cartridge. Replace the cap on the fuel cartridge and store in a cool, dry place, separate from the burner. Let the burner cool completely before storing, cleaning, or re-inserting the fuel cartridge.

CLEANING

1. Be sure the burner has cooled completely. Wash with warm soapy water to clean the burner body, trivet, and pan supports. Rinse with clean warm water and dry with a soft cloth.
2. DO NOT clean the burner head with water, this may result in ignition failure. A wire brush can be used to clean the burner head and burner holes if needed.
3. DO NOT immerse in water.
4. DO NOT use solvents or harsh chemicals to clean as they may cause damage.

CARE AND MAINTENANCE

Evaluate the condition of your stove before each use. Do not use if it has any damage, loose parts, or does not operate correctly.

- Ensure the trivet is properly placed in the upright position
- Verify the piezoelectric igniter operates properly and creates a spark by testing it without a fuel cartridge installed. Turn the ignition knob fully to the left until you hear a loud click. You should see a spark at the burner. This means it is operating correctly.

REPAIR AND REPLACEMENT PARTS

Warning: This stove contains no customer serviceable parts. Only authorized factory representatives may make repairs to this stove. Attempts to service yourself will void all manufacturer warranties.