

# Product Data Sheet

No. **12350** - 05/23

## POWER CAULK & ADHESIVE GUN

PRODUCT NUMBERS: 2350

### I. GENERAL DESCRIPTION

**Description:** Designed to deliver the professional performance of sealant and adhesive caulks without the physical strain of using a manual pump-style gun. It will evacuate 100% of the tube contents in most 10 oz. caulk tubes.

**Benefits:** This tool's ergonomic powered design relieves the stress and strain on the hand, wrist and arm by eliminating the need to squeeze and pump the trigger to dispense caulk. Other features include:

- Auto Reverse backs the plunger off of the tube ¼" (4mm) to relieve pressure when the trigger is released. Helps stop material from continuously flowing for clean, drip-free dispensing.
- Variable Speed Trigger adjusts the speed for optimum flow of material by increasing or decreasing pressure on the trigger.
- Speed Control Dial adjusts the speed from 1 (lowest) to 6 (highest). Note: it is recommended to start with the speed control set at 2 and then adjust as needed.
- Trigger Lock button locks the trigger to prevent accidental activation of the tool when not in use or when removing the replacing the battery.
- Electronic Overload Protection prevents damage to the tool if too much pressure is extended on the sealant or adhesive caulking tube. When this occurs, the motor will automatically reverse and then shut down.

**Uses:** Use with standard 10 oz./300 mL caulk tubes to apply sealant around windows, bathtubs and trim; or adhesives for building and other construction projects.

**Directions:** Push the trigger lock to the OFF position. Always have the Trigger in the lock position when installing and removing the battery; cleaning or performing maintenance; or when not in use. Note: the tool will not operate when the trigger is in the lock position. Insert a fully charged battery by sliding it into the handle until you hear it click into place. Adjust the plunger rod by pressing the rod release button, grasp the plunger rod handle and pull it all the way back. Insert the caulk tube into the cartridge holder. Trim the nozzle. Note: a smaller hole requires more power to push the tube plunger, which may also affect the battery run time. Press the rod release button and push the plunger rod handle forward until the plunger touches the caulking tube. Push the trigger lock to the ON position. Pull the trigger to dispense. Adjust the speed control to your desired setting. To remove the battery for charging and storage, press the battery release buttons and firmly pull out of the tool handle.


**Charging the Battery:** The battery cannot be recharged while installed in the tool. Plug the AC adapter into an AC 120V power outlet and insert the connector on the adapter into the connector on the battery. The charging indicator light will illuminate: Red LED = charge in process or Green LED = fully charged. Monitor during charging and disconnect when finished.

**Limitations:** Read all instructions before using. Please refer to the caulking sealant and adhesive manufacturer's instructions and their Safety Data Sheets for specific information on material hazards. Only use the charger provided with the unit or the replacement charger available from Aervoe. Do not remove the battery from the battery pack. Do not use if parts are damaged. Do not use in wet environments or submerge in water. If the battery leaks or is damaged, discontinue use and replace.

#### Packaging:

Each box	4.93 lbs. (2.2 kg)	0.22 CF (0.006 CM)	15.31" L x 2.78" W x 8.86" H
Case (2/case)	12 lbs. (5.2 kg)	1.09 CF (0.03 CM)	17.3" L x 12.75" W x 8.5" H

## II. CHARACTERISTICS & PROPERTIES

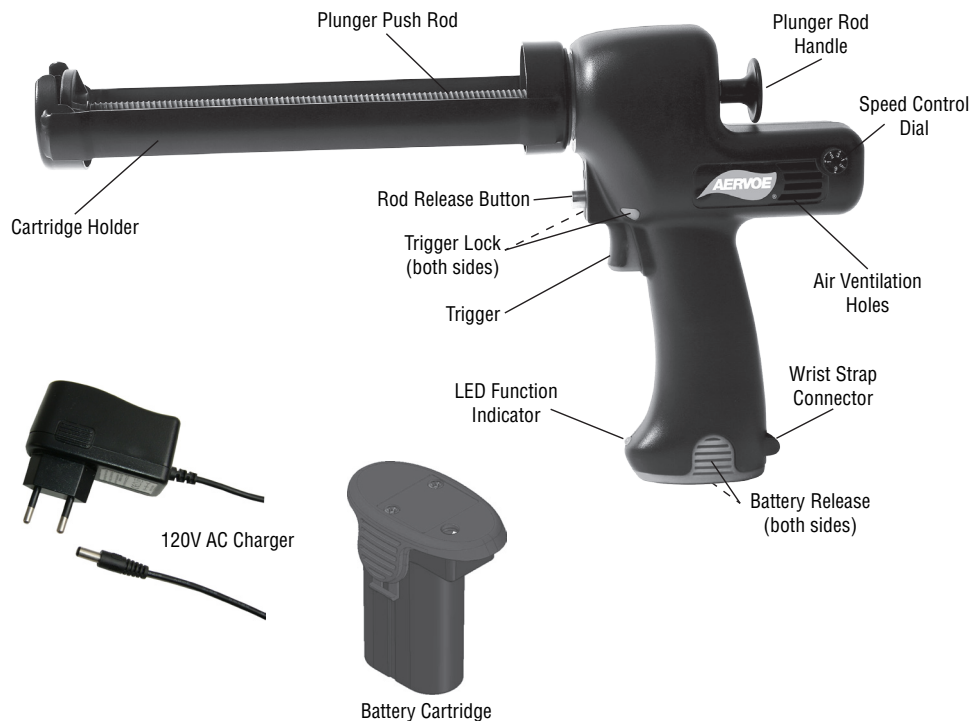

### Specifications:

Materials.....	Aluminum, steel, ABS plastic
Capacity.....	10 oz./300 mL caulking tube
Rechargeable battery pack.....	7.2V, 1.5 Ah lithium ion
120V AC charger.....	Input: 100-240V AC, 50/60 Hz Output: 8.5V DC/ 1500 mA
Weight.....	2.5 lbs.
Tool dimensions.....	15.35" x 2.78" x 8.86"
Case dimensions.....	15.75" x 3.25" x 12.20"
Maximum force.....	1000 lbs.
Dispense rate.....	100 caulking tubes per 1 fully charged battery
Push rod speed.....	13" per minute
Accessories.....	#2351 Replacement Battery Pack #2352 Replacement Charger

LED FUNCTION LIGHT INDICATORS		
LED COLOR	ACTION OR ERROR	DEFINITION OF STATUS
Solid white	Plunger rod moves forward	Normal function
Flashing white	Push rod moves backward	Normal function
Flashing green	Over voltage protection (OVP)	Automatically powers off
Solid red	Low battery voltage	Charge the battery pack
Flashing red	Low battery voltage protection (LVP)	Automatically powers off
Flashing blue	Over current protection (OCP)	Automatically powers off
Solid blue	Over temperature protection (OTP)	Automatically powers off

## IV. MISCELLANEOUS

Dispose of batteries according with local regulations. If repair is needed, contact Aervoe Industries, Inc. at 800-227-0196.

## V. WARRANTY

1-year warranty to the original registered owner on all products from date of purchase. User returns, exchanges and defective refunds must be made with the original place of purchase. Because Aervoe cannot control Buyer's handling or use of product, Aervoe makes no warranty expressed or implied when not used or stored in accordance with directions. Aervoe shall not be liable for cost of labor, incidental or consequential damages, and this warranty is limited to replacement or repair of product or credit of purchase.